


1. Prepare the surface so that the top edge of the comfort boot scraper ends flush with the top edge of the finished ground surface. Integrate any pipelines to be connected.



2. Place the scraper box in the ground, on the concrete bed if possible, connect any necessary pipeline and align with the surface.

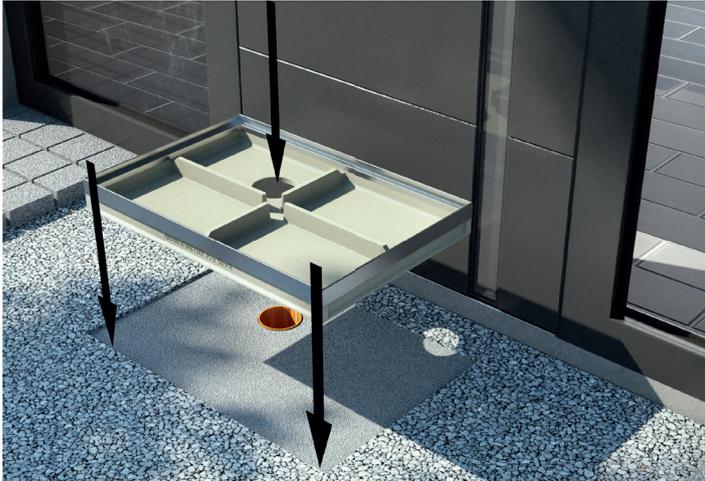

3. Fit the cover grating in place and install the surrounding surface structure.

