

# Technical data sheet

## ANRIN SELF 100

### Slotted top channels


#### Installation instructions

The following installation guidelines are schematic representations. These are provided as examples and are non-binding. The information provided here is based on our long-term experience in excavation and road construction as well as the state-of-the-art technology.

Despite this, designers and planners are always obligated to check the products and the installation instructions for their appropriateness. The example details are simplified recommendations for execution. Constructions are to be re-created on a project-specific basis.

Important: Insert gratings for the installation.


#### Installation instructions

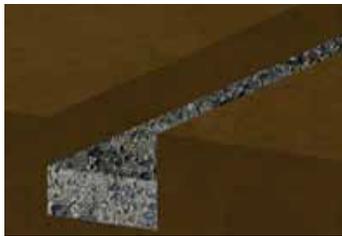


1. Dig out the trench.  
Fill in and pre-condense the base course.




2. Connect pipe connections to the pipeline and align the components evenly.  
Fill concrete bed.

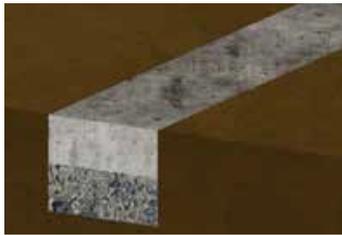


3. Fill concrete, 3 parts sand + 1 part water + 1 part cement, into the base of the trench.

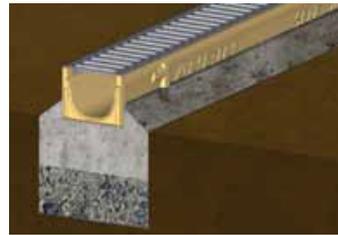

4. Place cover gratings on the channels.

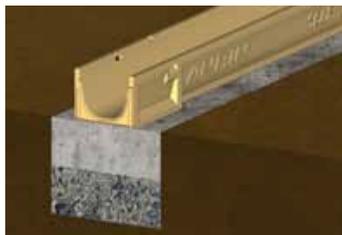

5. Position channel string, sump unit and end cap on the concrete bed.

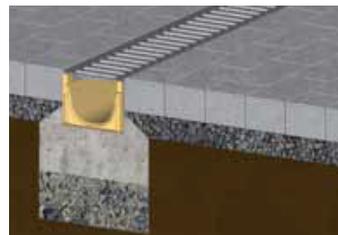

6. Install paving. The layer should end 2 to 5 mm higher than the cover grating.